



Specify the firmware file to be loaded: You'll next need to specify the firmware hex file that you want to load to the target. Go to "File/Load Hex File" and select it. Then browse to the directory that contains your hex file and click on the hex file. Then push OK.

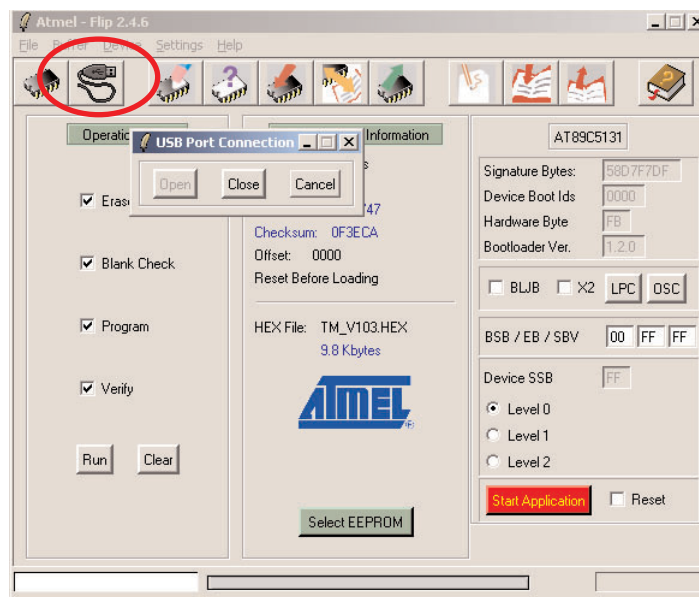

Open the USB port:

Next, click on the big USB cable button on the top. This specifies which port to open. You'll want to click on the USB option and push Open.

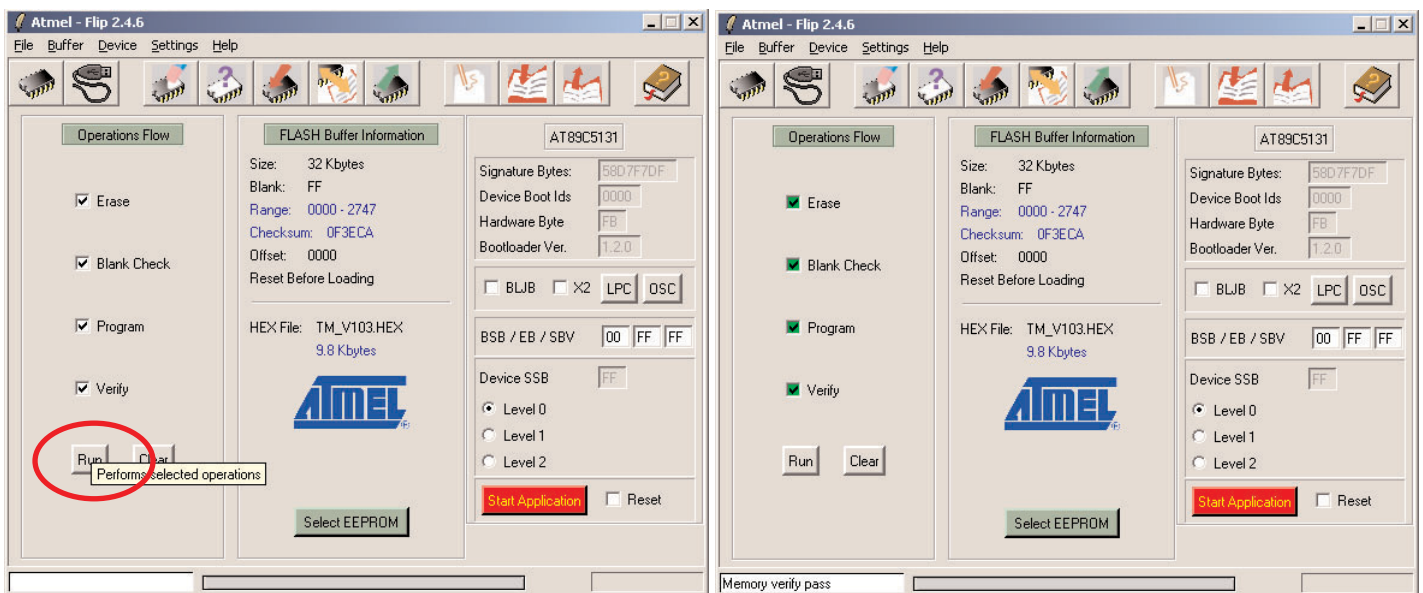

Program the board: Now you should be all set up. Push "Run". You should see a progress bar as the firmware downloads. It will actually download quite fast.

4. Restart and reset the module:

- power down the module,
- disconnect the usb cable,
- set the jumper back in play position (Pins 1 and 2),
- power on the module,

Now the update is finished.